



### Kort brukerveiledning

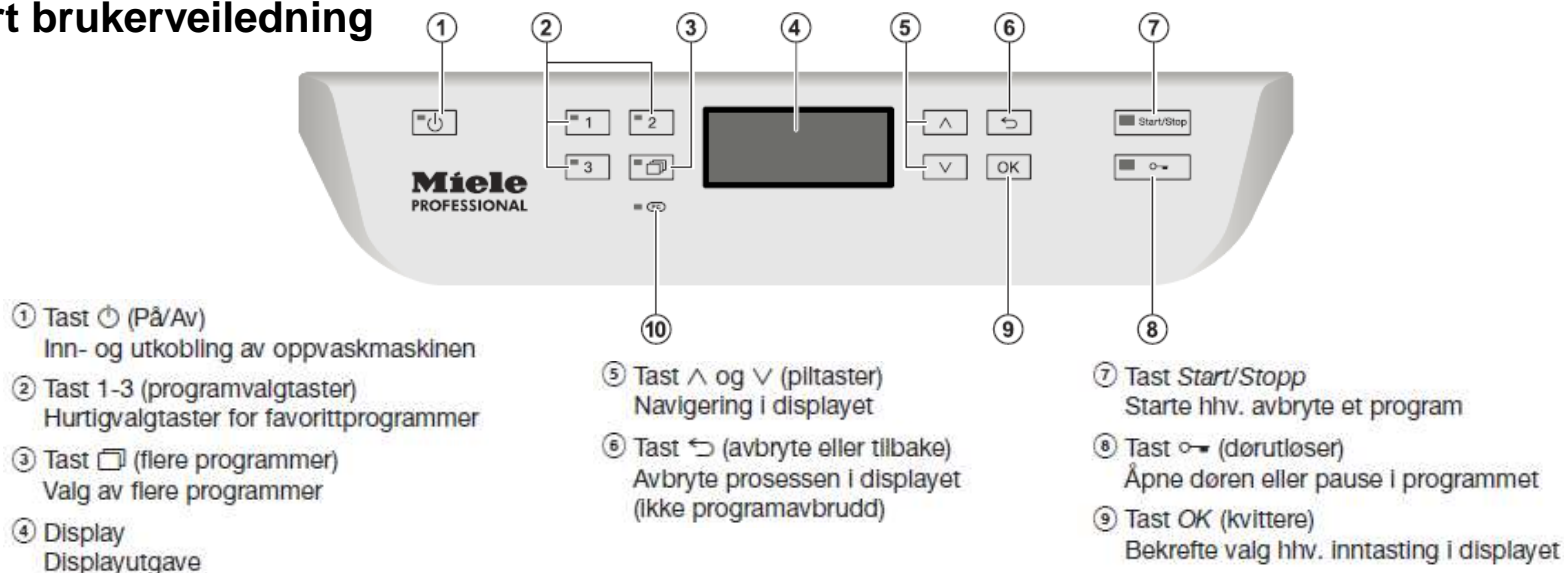

- **Skru på maskinen. Trykk inn tast (1) inntil LED lampen i tastefeltet lyser**
- **Trykk inn døråpner (8), døren åpnes automatisk. Åpne døren helt**
- **Sett inn serviset**
- **Doser rengjøringsmiddel(pulver) i kammeret i døren, glansmiddel doseres automatisk**
- **Lukk døren, den stenger seg selv.**
- **Velg program via hurtigtastene (2) eller tasten «flere programmer» (3)**
  - Ved å trykke tasten OK (9) kan du eventuelt velge tilleggsfunksjoner (f. eks. «Tørking») – se bruksanvisningen
- **Trykk inn starttasten (7), maskinen låses automatisk etter start**
- **Når programmet er slutt blinker dørtasten(8), åpne døren (tast (8), ta ut serviset og skru av maskinen)**
  - Ved tilvalgt funksjon «Tørking» åpnes døren automatisk ved programslutt
- **NB! Husk å rengjøre grovsilen og finfilteret i bunnen av maskinen hver dag!**
  - For rengjøring av tilbakeslagsventil i bunnen av maskinen (se bruksanvisningen side 103-104)

### User manual

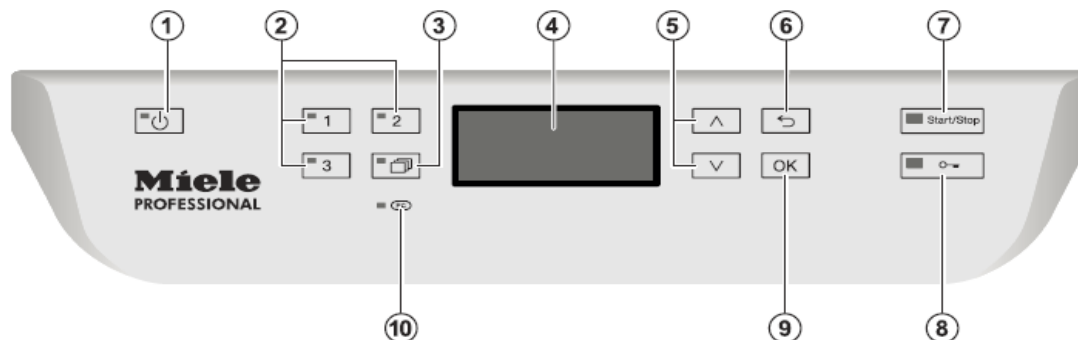

- ① On/Off button For switching the dishwasher on and off
- ② Buttons 1 - 3 (programme selector buttons) Short cut buttons for storing favourite programmes
- ③ button (further programmes) For selecting further programmes
- ④ Display User interface
- ⑤ and buttons For navigating within the display
- ⑥ button (cancel or back) For cancelling a process (not for cancelling programmes)
- ⑦ Start/Stop button For starting or cancelling a programme
- ⑧ Door release button For opening the door or interrupting a programme
- ⑨ OK button (confirmation) For selecting or confirming entries
- ⑩ PC / Optical interface This is used by Miele service technicians to run diagnostic checks and can also be used to update programming data in the future.

- Turn on the machine. Press button (1) until LED light in display lights up
- Press door button (8), door opens automatically. Open the door complete.
- Insert items to be cleaned
- Add cleaning agent (powder) in the door dispenser, do not use tablets. Rinse agent is dispensed from compartment in the door.
- Close the door. The door locks automatically!
- Choose programme by pressing direct buttons (2) or button «more programmes» (3)
  - By pressing button OK (9) it is possible to choose additional functions (ex. «Drying») – see user manual
- Press start button (7), machine is locked after start
- At the end of the programme the door button(8) will light up. Open the door – press button(8), unload the items and turn off the machine – button (1)
  - If «Drying» is chosen the door will open automatically at the end of the programme.
- **NB! Daily maintenance of the filters in the bottom of the chamber is recommended** (see user manual page103-104)